

MaxxFan™ 1-Switch Wall Control Operating Guide

MaxxAir Vent, Airxcel RV Group, P.O. Box 4020, Wichita, KS 67204, 316-832-3400

MaxxFan™ 1-Switch Wall Control Model Series 01000K

For use with MaxxFan Deluxe models 5100K thru 8501K & MaxxFan™ Standard models 4000K thru 4801K



Wall Control Features

- Turns Fan On or Off from convenient wall location
- Selects Low-Medium-High Speeds
- Keypad controls at ceiling remain active

Fan ON

Turns the Fan Motor ON at the last selected speed
When Fan is running, Selects Low, Medium or High Speed,
Once High Speed is reached, Fan Motor cycles back to
Low Speed

Fan OFF

Turns the Fan Motor OFF




MaxxFan™ 1-Switch Wall Control Installation Guide

MaxxAir Vent, Airxcel RV Group, P.O. Box 4020, Wichita, KS 67204, 316-832-3400

MaxxFan™ 1-Switch Wall Control Model Series 01000K

For use with MaxxFan Deluxe models 5100K thru 8501K & MaxxFan™ Standard models 4000K thru 4801K

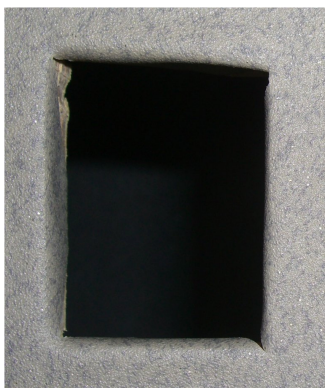



Step1. Cut a 1 5/8" x 1 1/4" rectangular hole in the wall where you wish to mount the 1-Switch Wall Control.



Step 3. Plug end of RJ-11 cable into RJ-11 jack on 1-Switch Wall Control PCB. Note arrow & 'Up' marking on PCB for proper orientation.



Step 4. Attach the Wall Control to wall with appropriate screws for wall construction

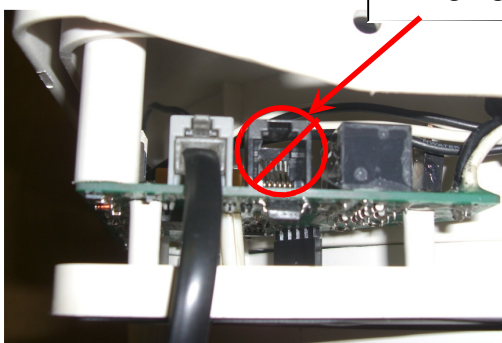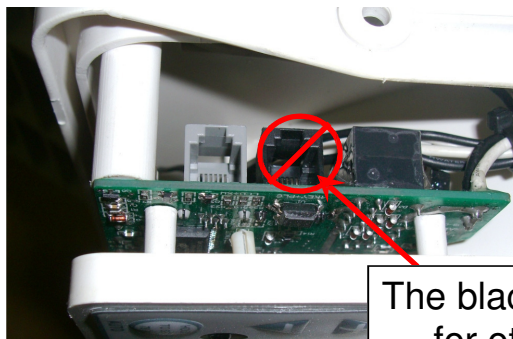

Step2. Plug one end of RJ-11 cable into GRAY RJ-11 jack on MaxxFan PCB (at ceiling)
(The black RJ-11 jack is for other controls).

Step2A. Route RJ-11 cable thru wall to hole cut in step 1.



Step5. Snap Bezel onto Wall Control.