



1) Remove old air conditioner shroud and set aside

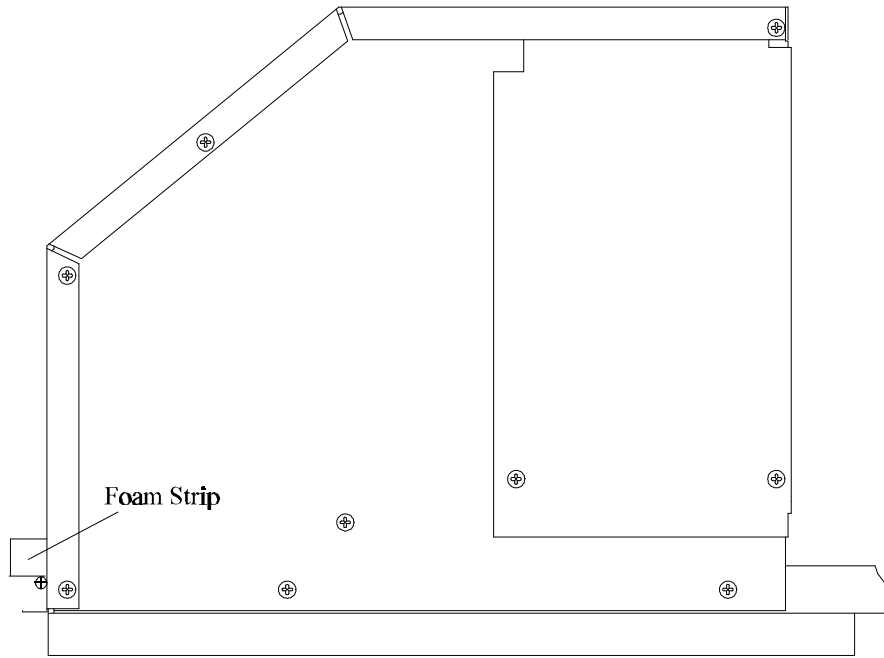

2) Install foam strip on the front of the evaporator housing just above the screw heads as shown above

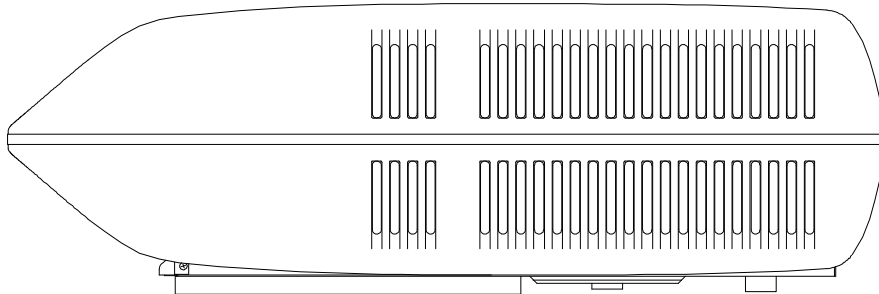

3) When installing shroud, work front lip over foam strip. Next pull shroud toward rear of unit and slide down over metal framework.

**RV Products
A Division of Airxcel, Inc.
P.O. Box 4020
Wichita, KS 67204**