

INSTALLATION, OPERATION & APPLICATION GUIDE

for 6537-344*

2-STAGE HEAT PUMP WALL THERMOSTAT



RV Products[®]

A Division of AIRXCEL, Inc.

Actual thermostat is black with white markings. Colors were reversed for use in these instructions.

* Last digit represents specific model number

Caution

This thermostat should be installed by trained technicians only. Adhere to all local and national codes. Disconnect all power to the system before installing, removing, or cleaning.

Operation

The display indicates room temperature and the word **ROOM** is shown on the LCD until the temperature selector is pressed; at that time the display temporarily indicates the setpoint temperature and the word **SET** is shown on the LCD. Each time the **UP** arrow is pressed, the setpoint will increase. Each time the **DOWN** arrow is pressed, the setpoint will decrease. Once the temperature selector button is no longer pressed for a few seconds, the room temperature will again be displayed, and the word **ROOM** will be displayed on the LCD.

In electric heat mode, if the heat pump is unable to satisfy the thermostat, the heat pump goes into lockout. **DIFF** will display on the thermostat LCD indicating second stage heating is required to satisfy the thermostat.
In gas heat mode, the gas furnace will provide the only source of heat and the heat pump is locked out.

Temperature		
Mode	Range °F	Range °C
Cooling (set)	98°F to 33°F	37°C to -1°C
Heating (set)	98°F to 33°F	37°C to -1°C
Display (room)	99°F to 32°F	38°C to 0°C

Note: The temperature is displayed in degrees Fahrenheit as a factory set default (see Figure 2 on Page 9). To display in degrees Celsius, move the jumper marked "F" and "C" to bridge between middle pin and position "C."

Refer to truth table (Pages 2 and 3) for a more detailed listing of operation sequence.

Operation Chart

The chart below shows the system functions with the 6537-344* thermostat. After the entire air conditioning system (and furnace system) is installed, check each position function.

6537-344* 2-Stage Heat Pump Thermostat Truth Table

Mode	Fan Speed	Fan Speed Switch #1	Fan Speed Switch #2	Calling	Operation of Unit
1 Cool	Auto	Lo	No	No	No functions occur in this mode
2 Cool	Auto	Lo	1° above set	Stage 1	ID fan low, compressor #1 and OD blower low cycle as needed
3 Cool	Auto	Lo	2° above set as needed	Stage 2	ID fan low, compressor #1 and #2 and OD blower high cycle
4 Cool	On	Lo	No	No	ID fan low continuous
5 Cool	On	Lo	1° above set as needed	Stage 1	ID fan low continuous, compressor #1 and OD blower low cycle
6 Cool	On	Lo	2° above set as needed	Stage 2	ID fan low continuous, compressor #1 and #2 and OD blower high cycle as needed
7 Cool	Auto	Hi	No	No	No functions occur in this mode
8 Cool	Auto	Hi	1° above set	Stage 1	ID fan high, compressor #1 and OD blower low cycle as needed
9 Cool	Auto	Hi	2° above set as needed	Stage 2	ID fan high, compressors #1 and #2 and OD blower high cycle
10 Cool	On	Hi	No	No	ID fan high continuous
11 Cool	On	Hi	1° above set	Stage 1	ID fan high continuous, compressor #1 and OD blower low cycle as needed
12 Cool	On	Hi	2° above set as needed	Stage 2	ID fan high continuous, compressors #1 and #2 and OD blower high cycle as needed

	Mode Switch	Fan Speed Switch #1	Fan Speed Switch #2	Calling	Operation of Unit
13	Off	Auto	Lo or Hi	N/A	No functions occur in this mode
14	Off	On	Lo	N/A	ID fan low continuous
15	Off	On	Hi	N/A	ID fan high continuous
16	Gas Heat	Auto or On	Lo or Hi	No	No functions occur in this mode
17	Gas Heat	Auto or On	Lo or Hi	Stage 1 1° below set	Low gas heat will be energized to run
18	Gas Heat	Auto or On	Lo or Hi	Stage 2 5° below set	Low gas heat and high gas heat will be energized to run *See note 2*
19	Elec Heat	Auto or On	Lo or Hi	No	Nothing is operating in this mode
20	Elec Heat	Auto or On	Lo or Hi	Stage 1 1° below set	Heat pump will run ID fan high, Compressor #1 and #2 with reversing valve #1 and #2 and the OD fan high
21	Elec Heat	Auto or On	Lo or Hi	Stage 2 5° below set	Heat pump will run ID fan high, Compressor #1 and #2 with reversing valve #1 and #2, OD fan high and low gas heat will be energized to run *See note 2 & 3*
22	Elec Heat	Auto or On	Lo or Hi	Stage 3 7° below set	Heat pump will run ID fan high, Compressor #1 and #2 with reversing valve #1 and #2, OD fan high and low and high gas heat will be energized to run *See note 2 & 3*

- Notes:** 1) When 2nd stage cooling is activated, it stays on until setpoint is satisfied.
 2) When 2nd or 3rd stage heating is activated, it stays on until setpoint is satisfied.
 When a Heating stage is running for more than 20 minutes without reaching setpoint then the next available heating stage will be energized.
 3) The word "DIFF" will display on the LCD when 2nd stage heat (low gas furnace) is operating.

Heat Pump Algorithm
To bring on Low gas furnace as 2nd stage heat and High gas furnace as 3rd stage heat

Setpoint	Indoor Temp.	Operation
70	70+	Nothing is operating
	69	Heat Pump turns on (primary heat source)
	71	Heat Pump turns off (thermostat satisfied)
	69	Heat Pump turns on
	65	Low gas furnace turns on (heat pump not able to satisfy thermostat) (first strike for 2nd stage electric heat counter) "See notes"
	63	High gas furnace turns on "See notes"
	71	Heat Pump and gas furnace turn off
	69	Heat Pump turns on
	65	Low gas furnace turns on (second strike for 2nd stage electric heat counter) "See notes" "See notes"
	63	High gas furnace turns on "See notes"
	71	Heat Pump and gas furnace turn off
	69	Heat Pump turns on
	65	Low gas furnace turns on and Heat Pump turns off (2nd stage electric heat counter reaches 3rd strike and the Heat Pump is locked out for 2 hours) "See notes"
	63	High gas furnace turns on "See notes"
	71	Gas furnace turns off (thermostat satisfied)
	69	Low gas furnace turns on (becomes primary heat source)
	65	High gas furnace turns on as 2nd stage heat "See notes"
	71	Gas furnace turns off (thermostat satisfied)
	After 2 hour lockout	
	69	Heat Pump turns on (resumes as primary heat source)
	65	Low gas furnace turns on and heat pump turns off (becomes primary heat source and the heat pump is locked out for another 2 hours)
	After 2 hour lockout	
	69	Heat pump turns on (resumes as primary heat source)
	71	Heat pump turns on (1stat satisfied) (2nd stage electric heat counter is reset anytime heat pump satisfies thermostat setpoint and does not need gas furnace)
Notes:		
1) When 2nd or 3rd stage heating is activated, it stays on until setpoint is satisfied. When a heating stage is running for more than 20 minutes without reaching setpoint then the next available heating stage will be energized.		
2) The word "DIFF" will display on the LCD when 2nd stage heat is operating.		

2-Stage Gas Heat Algorithm
High gas furnace as 2nd stage heat

Setpoint	Indoor Temp.	Operations
70+	Nothing is operating	
69	Low gas furnace turns on (primary heat source)	
71	Low gas furnace turns off (thermostat satisfied)	
69	Low gas furnace turns on	
65	High gas furnace turns on (low gas heat not able to satisfy thermostat) (first strike for 2nd stage gas heat counter) *See notes*	
71	Low and high gas furnace turn off	
69	Low gas furnace turns on	
65	High gas furnace turns on (second strike for 2nd stage gas heat counter) *See note*	
71	Low and high gas furnace turn off	
69	Low gas furnace turns on	
65	High gas furnace turns on (2nd stage gas heat counter reaches 3rd strike and low gas furnace is locked out for 2 hours) *See notes*	
71	Low and high gas furnace turn off	
69	Low and high gas furnace turns on (becomes primary heat source)	
71	Low and high gas furnace turns off (thermostat satisfied)	
After 2 hour lockout		
69	Low gas furnace turns on (resumes as primary heat source)	
65	High gas furnace turns on (becomes primary heat source and low gas furnace is locked out for another 2 hours) *See notes*	
After 1 hour lockout		
69	Low gas furnace turns on (resumes as primary heat source)	
71	Low gas furnace turns off (thermostat satisfied)(2nd stage gas heat counter is reset anytime low gas furnace satisfies thermostat setpoint and does not need high gas furnace)	

Notes: 1) When 2nd stage heat is activated it stays on until setpoint is satisfied.
 2) When a heating stage is running for more than 20 minutes without reaching setpoint then the next available heating stage will be energized.

Application

The 6537-344* thermostat is intended for use with an RV Products 2 stage heat pump. The thermostat connects to the heat pump with a 9-pin plug through a lifeline. The OEM (Original Equipment Manufacturer) must supply the 12 VDC wiring and the furnace control wiring that connects to the 4-pin plug on the thermostat. The OEM supplies the mating receptacle for the 4-pin plug. RV Products suggests the thermostat wiring be a minimum of 18 gauge. The furnace control circuit must not exceed 1 amp. The thermostat is equipped with a replaceable fast-acting 2 amp fuse located on the base of the thermostat. The fuse is designed to "open" if the furnace is mis-wired or if there is a short in the system. Before replacing the fuse, the cause of the failure must be located and corrected.

Installation

WARNING: Be sure all electrical power has been disconnected from the heat pump and the power supply.

These instructions are provided for the proper mounting of the thermostat itself. An Operation Chart (see Pages 2 and 3) is provided to show thermostat capabilities.

THERMOSTAT LOCATION

This thermostat is a sensitive instrument. For accurate temperature control and comfort, the following considerations should be taken into account:

1. Locate the thermostat on an inside wall about five feet above the floor. Pick a dry area where air circulation is good.
2. Do not install the thermostat where there are unusual heating conditions such as direct sunlight, heat producing appliances (television, radio, wall lamp, etc.) or a furnace or air conditioner supply register.

WIRING THE WALL THERMOSTAT

OEM must supply mating parts to connect these thermostats per Figure 1. The plugs must be connected to motorcoach wire harness before the base is secured to the wall.

Figure 1
6537-344* Thermostat Assembly with Plugs


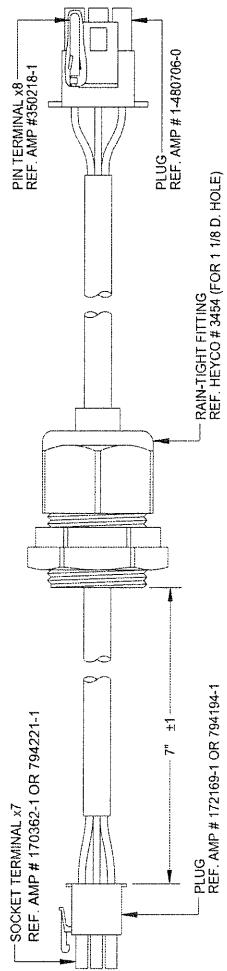



Figure 1
6537-344* Thermostat Assembly with Plugs (continued from Page 7)

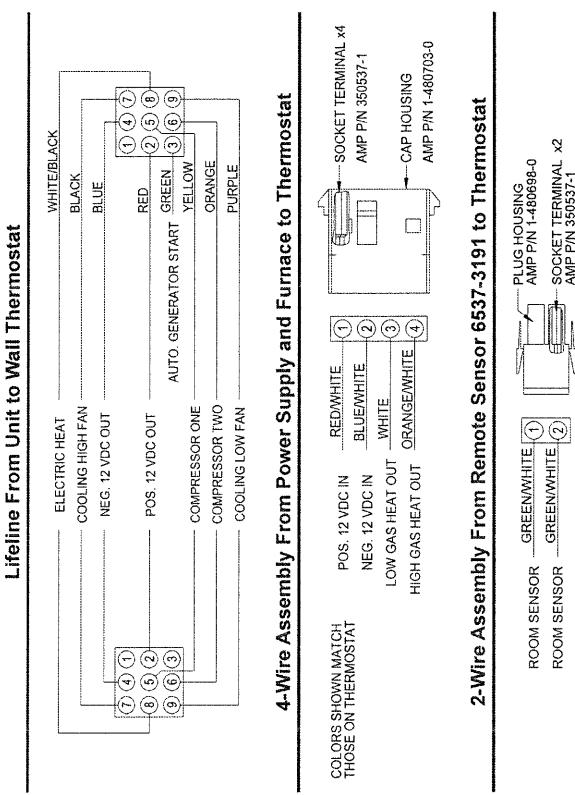

ATTACHING THE WALL THERMOSTAT

1. Separate the thermostat cover from the base by gently pulling at the left and right. See Figure 2.
2. Connect plugs to motorcoach wiring harness.
3. Attach the new thermostat base to the wall at the desired mounting location.
4. Reattach thermostat cover to base.

Figure 2
Thermostat Dimensions

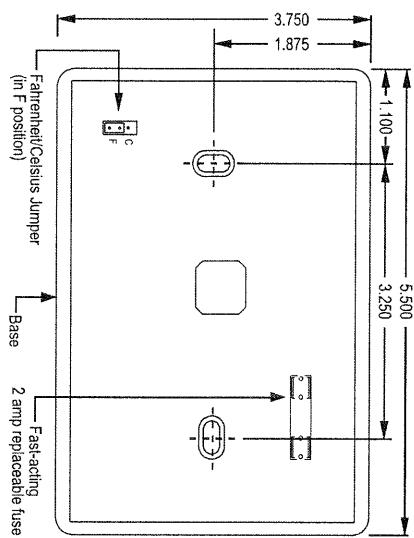



RV Products

A Division of Airxcel, Inc.

P.O. Box 4020

Wichita, KS 67204

Web: www.rvcomfort.com

1976-449 (09-06)

LIA227